


# RT-DTA+TV

## DTA+TV Remote Control

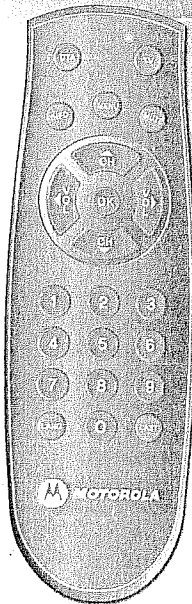

### Programming And Operating Instructions

To have a clearer idea of the features and capabilities of your remote control, take a moment to read these instructions. Save for future reference.

© 2009, Contec LLC, Rev.02/09

### 1. Introduction

Your remote control is simple to program, easy to use, and can operate two (2) electronic devices, which include :

**CABLE** Motorola Digital Transport Adapter  
**TV** Televisions

Before you can use your remote control, it must be programmed (set-up) to operate your TV.

### 2. Before Getting Started

Some of the special features on your remote control are as follows :

#### Point and Press® Programming

Lets you program your TV without codes. For more information, see Section 4.

#### Time Out

Shuts remote off if any button is pressed and held for 30-seconds. This extends battery life in the event the remote becomes lodged under or between heavy objects.

### 3. Installing / Replacing Batteries

Install two (2) new "AAA" batteries as indicated by the diagram in the battery compartment.

When the batteries become low and need to be replaced, the LED will not illuminate normally or at all during use.

When this happens, replace the existing batteries with two (2) new "AAA" batteries to restore normal operation to the remote control.

### 4. Programming Your TV

Code-Entry Programming...

1. Turn on TV.
2. Press [OK], then [MUTE] together until the LED illuminates.
3. Locate the 3-digit code for your brand in the TV Setup Code list and enter it on the keypad of the remote control. Entry of the correct code will cause your TV to turn off.

If multiple codes are listed for your brand, you may have to enter several different codes until your TV turns off.

4. As soon as you have entered a 3-digit code that turns your TV off, press [MUTE].

a. If the TV turns back on, press [OK] to lock in the code. The LED will blink and go out.

Or

b. If the TV does not turn back on, enter a different 3-digit setup code until your TV turns back on. Then press [OK] to lock in the code. The LED will blink and go out.

Point and Press® Programming...

1. Turn on TV.
2. Press [OK], then [MUTE] together until the LED illuminates.
3. Press and hold the [CH ▲] button until one device turns off. While you are pressing the [CH ▲] button, the LED will blink. As soon as one device turns off, release the [CH ▲] button.
4. Press [MUTE]. If the device that turned off...

- a. Turns back on, press [OK] to lock in this code. The LED will blink and go out.

Or

- b. Does not turn back on, press [CH ▼] one step at a time until that device turns back on. Each time you press the [CH ▼] button, the LED will blink.

Once you have found a code that turns the device on / off, press [OK] to lock in this code. The LED will blink and go out.

### 5. Programming Volume Control

To program volume control to Motorola Digital Transport Adapter...

1. Press [DTA], then [OK] together until the LED illuminates.

2. Press [VOL ▲], then [DTA] for Cable volume.

3. The LED will blink and go out.

To program volume control to TV...

1. Press [DTA], then [OK] together until the LED illuminates.

2. Press [VOL ▲], then [TV] for TV volume.

3. The LED will blink and go out.

### 6. Resetting Your Remote Control

To reset your remote to its factory default setting, follow these steps:

1. Press [DTA], then [OK] together until the LED illuminates.

2. Press [MENU], then [MENU] again. The LED will blink and go out.

### TV Set-up Codes

BRAND	CODE				
Admiral	026	054	211	213	
Advent	072	094	425	447	463
Adventura	047				
Aiwa	214	471			
Akai	053	462	473	522	524
	547	572	586		
Amark	023	215			
Amstrad	157				
Anam	217	218	219	220	221
	222	223			
AOC	053	573			
APEX	030	038	427		
Astar	462				
Audiovox	191	220	465		
Belcor	073				
Bell & Howell	211	213			
Ben Q	454				
Broksonic	165	167			
Brokwood	073				
Candle	068	091			
Centurion	095	107	108		
Citizen	068	091	211	213	233
Coby	558				
Concerto	073	095			
Contec	147				
Coronado	023				
Craig	223				
Crosley	598				
Crown	023				
Curtis Mathes	016	054	107	108	211
	213				
Daewoo	051	068	073	095	158
	159	189	191	194	196
	197	198	200	202	204
	205	206	207	209	

Daytron	073	095	107	108	
Dell	072	094			
Diamond Vision	563				
Dumont	073				
Dynex	167	415	424	567	577
Electro Home	073	095			
Elektra	353				
Element	459	587			
Emerson	016	023	053	064	103
	139	158	159	164	165
	166	167	168	169	392
	400	401	402	408	415
	424	507	567	577	590
Envision	073	095			
ESA	454	456	538		
Fisher	355	356			
Fujitsu	460	469	560		
Funai	047	048	157	168	211
Gateway	426				
GE	015	018	042	044	049
	054	055	068	073	090
	092	095	101	102	103
	389	390	396	403	406
	407				
Gibraltar	023	048	053	068	073
	090	095	107	108	233
	360				
Goldstar (LG)	023	053	068	073	090
	107	108	233	360	361
Gradiente	104				
Grundig	233				
Go Video	443				
Haier	053	073	095	108	427
	519	587	573	596	
Hall Mark	073	095			
Hitachi	023	068	095	096	097
	098	099	100		
HP	072				
Hyundai	453				
iLO	524	586			

**RT-DTA + TV  
DTA+TV Remote Control**

Initial	470				
Inkel	364				
Insignia	167	415	424	450	456
	461	462	523	524	567
	577	586			
JC Penney	039	053	068	073	092
	095	102	355		
Jensen	062	461			
JVC	104	105	106	396	397
	410	589			
Kawasho	073	095			
KMC	023				
Konka	445	589			
Kosch	462				
KTV	023	053	233	366	
Kurazai	211	213			
Legend	169				
LG (Goldstar)	023	053	068	073	090
	107	108	233	360	361
	424	567	577	587	
Lodgenet	211	213			
Logik	211	213			
Luxman	068	073	095		
LXI	024	026	157	355	388
MAG	459				
Magnavox (Philips)	023	068	071	072	073
	089	090	091	092	093
	094	134	385	387	397
	404	419	463	470	472
	549	594	595		
Majestic	211	213			
Marantz	053	107	108	109	
Matsui	582	583	585		
Maxent	426	533	534		
McIntosh	555				
Megatron	215				
Memorex	090	211	213	355	388
	405	423	459		
MGA / Mitsubishi	053	068	073	090	095
	107	108	109	110	216

**RT-DTA + TV  
DTA+TV Remote Control**

	384	394	395	398	399
	417				
Mintek	470				
Montgomery Ward	022	023	026	053	071
	072	108	211	213	
NEC	028	068	090	108	200
	464				
Net TV	426				
Norcent	455	472			
Olevia	073	108	519	541	587
Orion	019	159	160	161	162
	163	382	423	424	558
Panasonic	042	043	044	045	046
	419	429			
Philco	023	053	068	071	072
	091	463			
Magnavox (Philips)	023	068	071	072	073
	089	090	091	092	093
	094	134	385	387	397
	404	419	463	470	472
	549	594	595		
Pilot	073	094	233		
Pioneer	019	111	144	383	551
Planar	474				
Polaroid	384	394	459		
Portland	023	068			
Prima	072				
ProScan	055	070			
Proton	090	371	372		
Protron	457	467			
Proview	459				
Pulsar	073				
Quasar	044				
Radio Shack	073				
Realistic	022	166	168		
RCA	042	052	053	054	055
	068	069	070	416	
Runco	525				
Sampo	090	108			
Samsung	015	016	017	023	031

**RT-DTA + TV  
DTA+TV Remote Control**

	090	107	108	134	147
	151	153	386	411	508
	577				
Sansui	423	424			
Sanyo	353	355	356	376	377
Sceptre	468				
Scott	090	108	168	561	
Sears	023	030	031	038	039
	068	353	355	356	
Sharp	016	022	023	024	025
	026	027	028	029	393
	395	409			
Signature 2000	023	026	108	211	213
Sony	014	020	021	178	540
Soundesign	091				
Soyo	562				
Squareview	157				
Sunbrite TV	587				
Superscan	419				
Supre-Macy	380				
SVA	592				
Sylvania	068	071	072	090	091
	092	093	107	108	157
	158	419	456	466	590
Symphonic	047	157			
Tatung	044	446			
Techwood	068				
Teknika	023	068	072	091	168
	213	463			
Telerent	023	213			
Tera	381				
Tevion	065	414			
TMK	068	090			
Toshiba	030	031	038	039	423
	571				
Totevision	233				
Trutech	095				
Universal	068	102			
Vidtech	068				
ViewSonic	428	513	515	527	528

8

9

**RT-DTA + TV  
DTA+TV Remote Control**

	529	530	531	532	533
	534	535	536	537	538
	539				
Viore	031	508	598		
Visco	589				
Vizio	053	062	073	095	454
	538	561	573		
Wards	068	090			
Westinghouse	020	458	463		
White Westinghouse	211	408	449		
XR-1000	213				
Yamaha	068				
York	090	108			
Zenith	047	048	049	050	051
	391	405	406	434	567
	577	594			

**7. Programación Adicional / Información de  
Diagnóstico - Troubleshooting**

1. Si un botón se presiona por más de 30-segundos, su control se apagará automáticamente.  
Esto extiende la vida de la batería en el evento que el remoto se aloja debajo o entre objetos pesados, por ejemplo, las almohadas del sofá.
2. De surgir cualquier pregunta referente a la marca del televisor, modelo o funcionamiento de su Convertidor Digital Motorola, favor de comunicarse con su operador de cable.

Rev. 02/09

© 2009, Contec LLC

Point and Press® es una marca registrada de Contec LLC